



Instruction Manual

THM_3000 Series


2-way / 3-way Thermostatic Control Valve

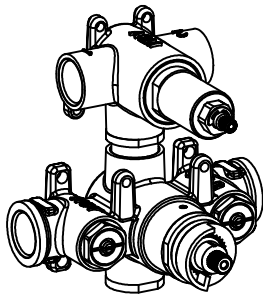


2-Way Rough In
HW3200.RI

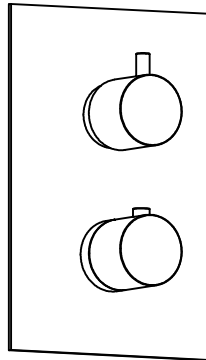


2-Way Trim Set
HW3202.TR

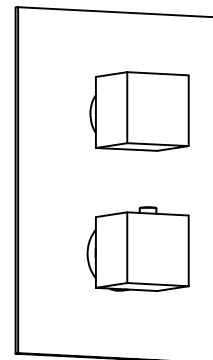


2-Way Trim Set
HW3205.TR

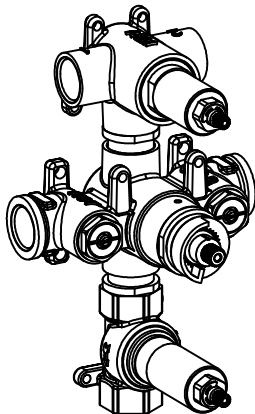

3-Way Rough In
HW3400.RI

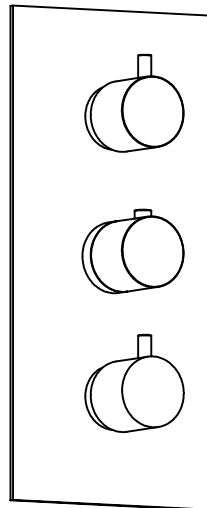


3-Way Trim Set
HW3402.TR

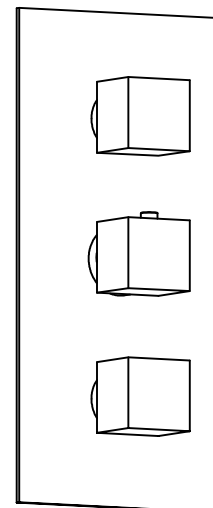


3-Way Trim Set
HW3405.TR

1. Connection

2-Way Connection

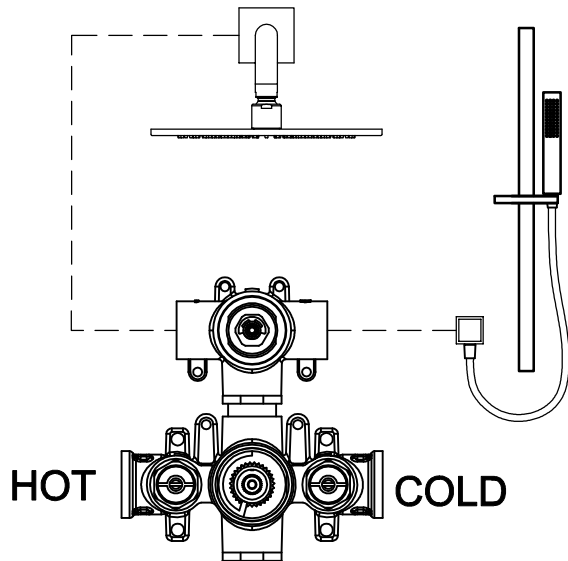


3-Way Connection

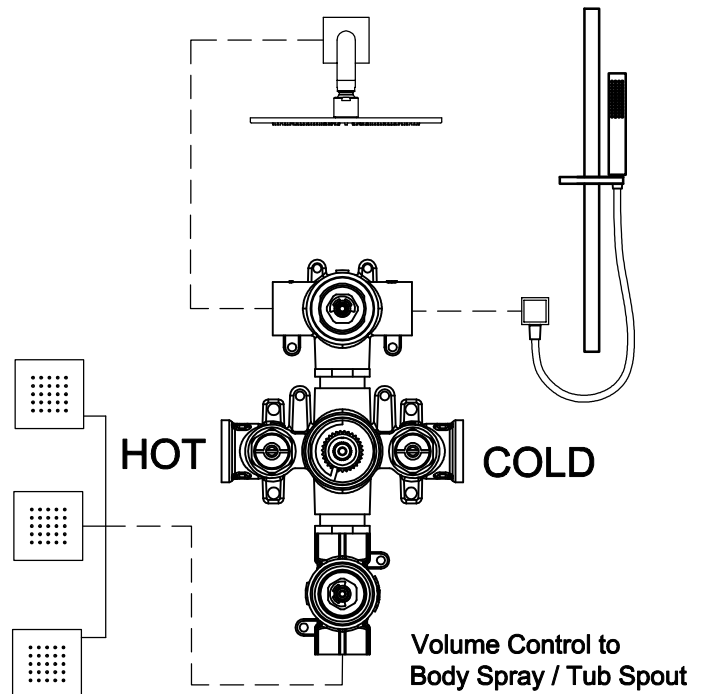


2. Cut-Out Dimension

Finished Wall Must Between Min. & Max.

2-Way


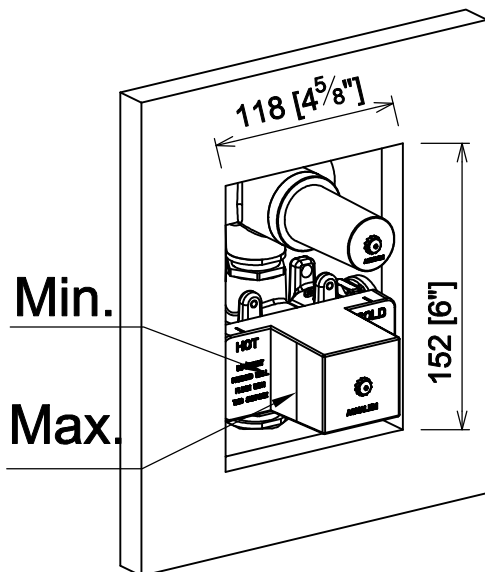


3-Way

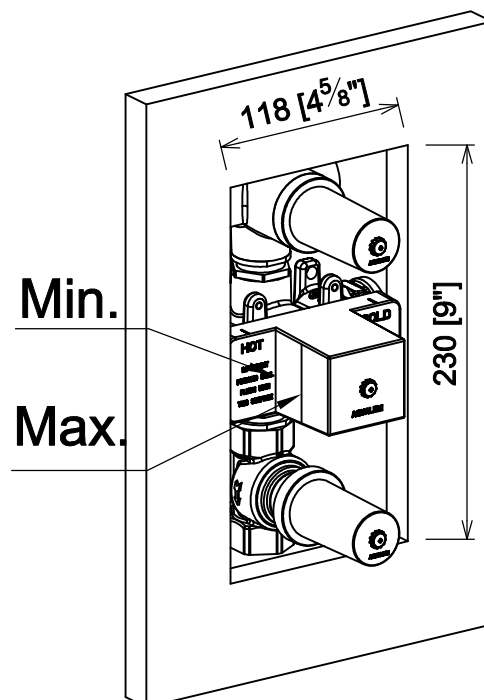


3. Trim Installation

Remove Cap

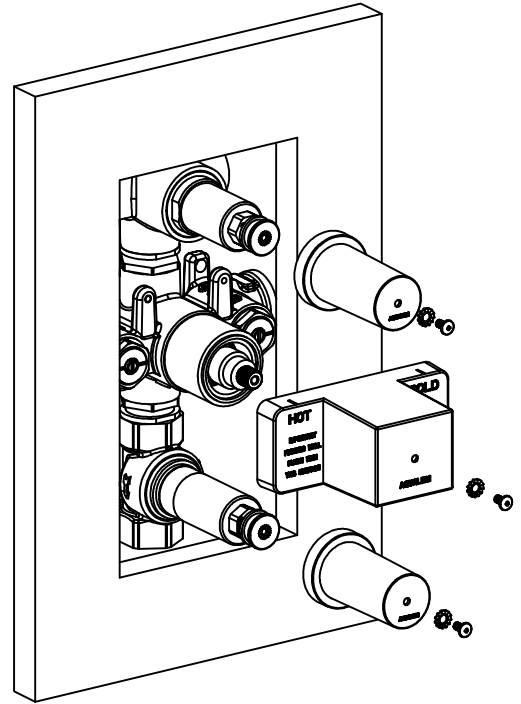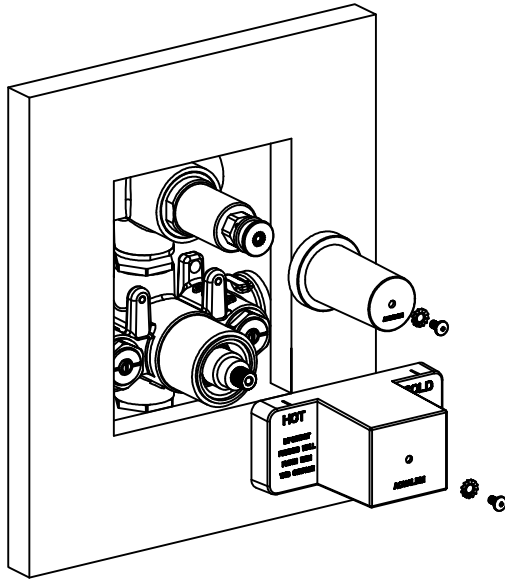


4. Temperature Calibrate

Black Mark Align The Slot To
Factory 38° Calibration

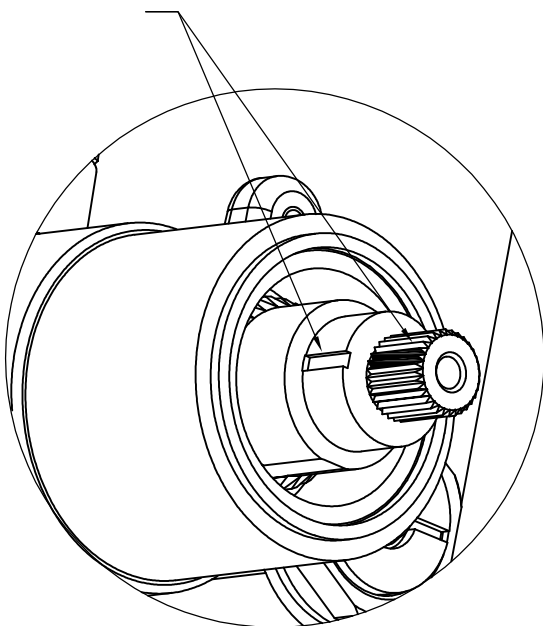



For Some Cases , Need
to Adjust The Cartridge
To Calibrate At 38°

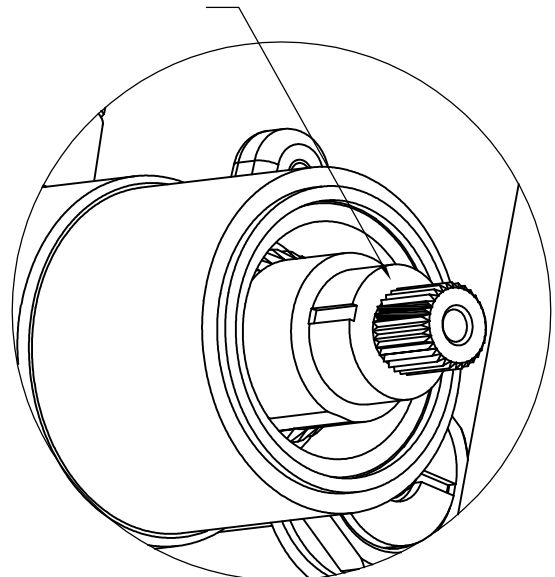

5. Front Plate & Handle Installation

2-Way

Make Sure Lock Washer
Installed

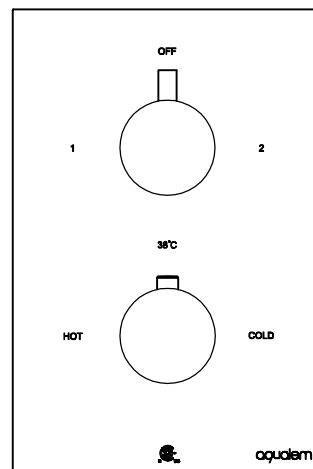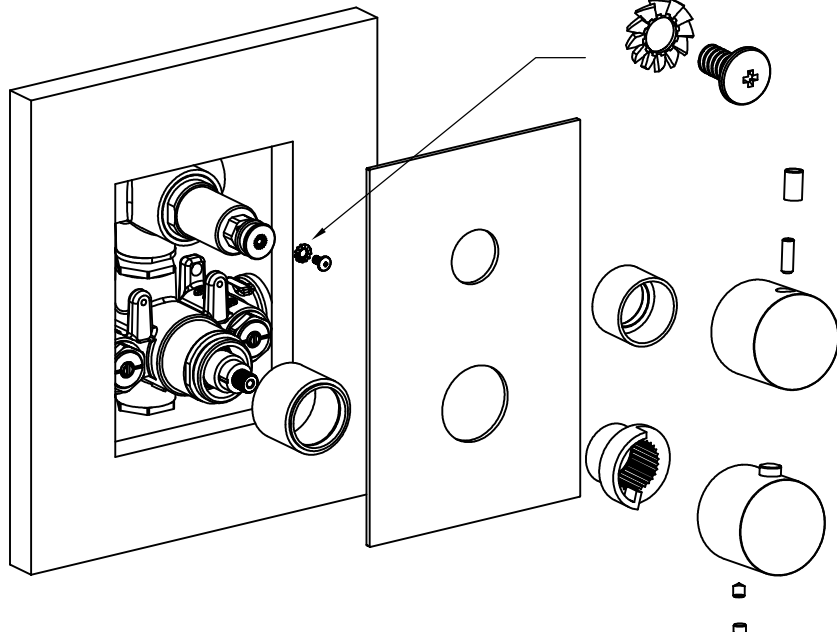

3-Way

Make Sure Lock Washer
Installed

