


Instruction Manual MP4280.RI

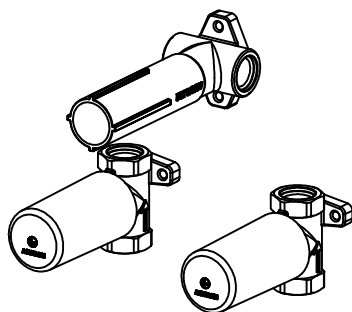

Rough valve connection

