



Installation Manual

THM_2000 Series


2-way / 3-way Thermostatic Control Valve

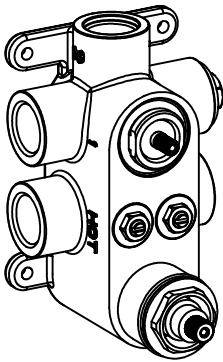


2-Way Rough In
HW2200.RI

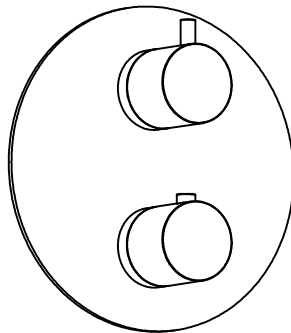


2-Way Trim Set
HW2216.TR

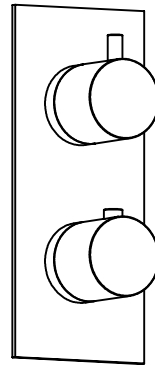


2-Way Trim Set
HW2202.TR

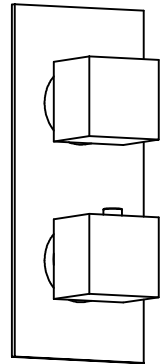


2-Way Trim Set
HW2205.TR

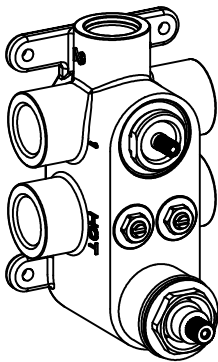


3-Way Rough In
HW2300.RI

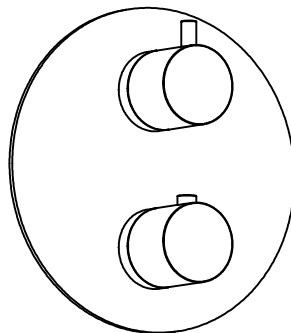

3-Way Trim Set
HW2316.TR

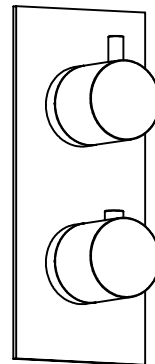


3-Way Trim Set
HW2302.TR

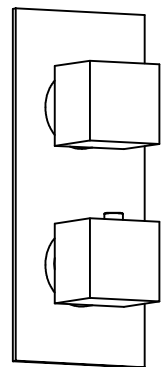


3-Way Trim Set
HW2305.TR

1. Connection

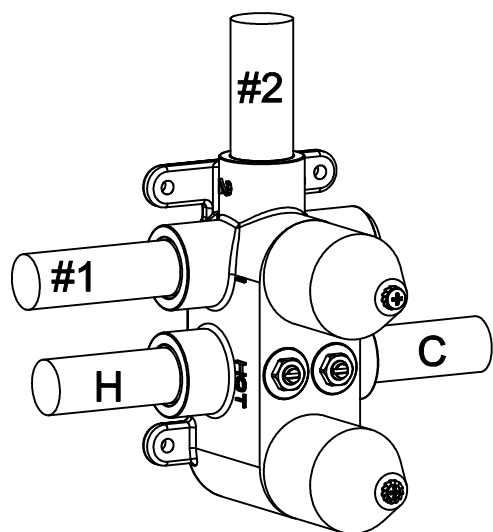


2-Way Connection

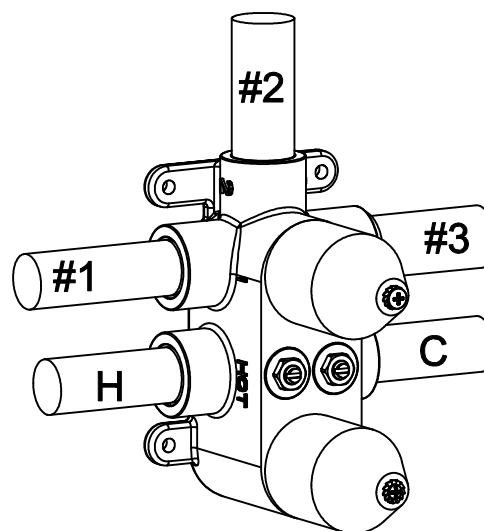

3-Way Connection


2. Cut-Out Dimension

Finished Wall Must
Between Min. &
Max.

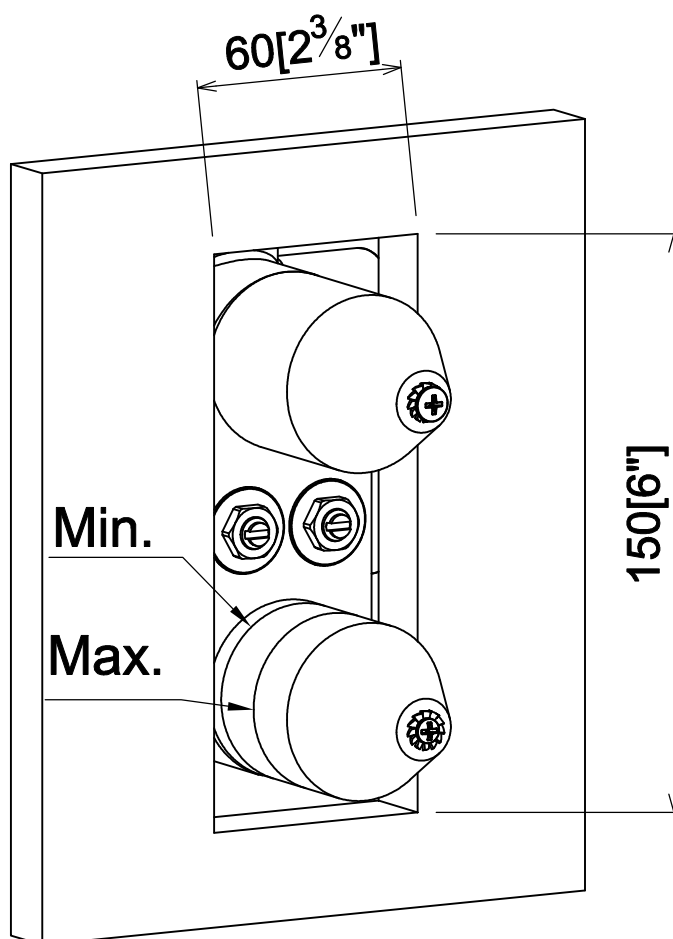


3. Trim Installation


Remove Cap

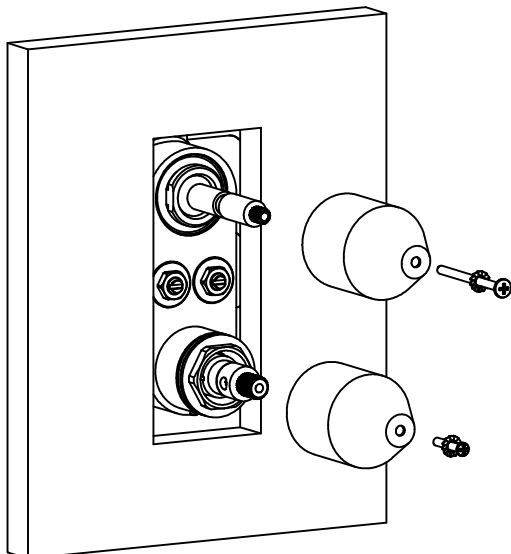


Sleeve Installation

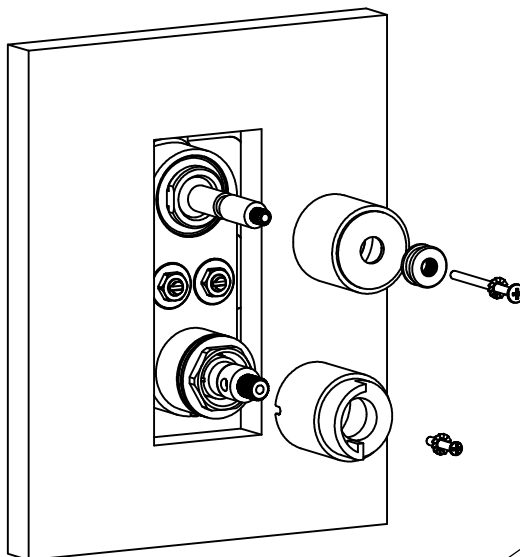

Make Sure Lock Washer installed

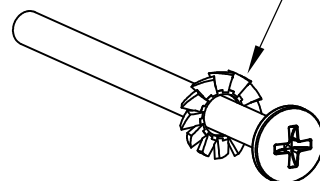


Align The Slot To Screw


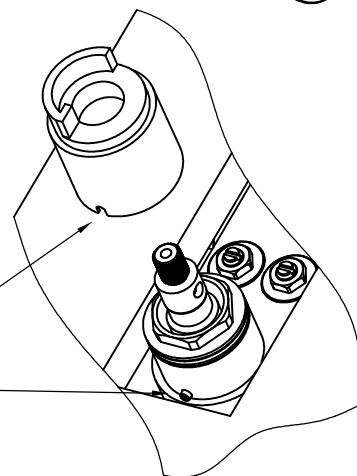


4. Temperature Calibrate



Black Mark Align The Slot To Factory 38° Calibration

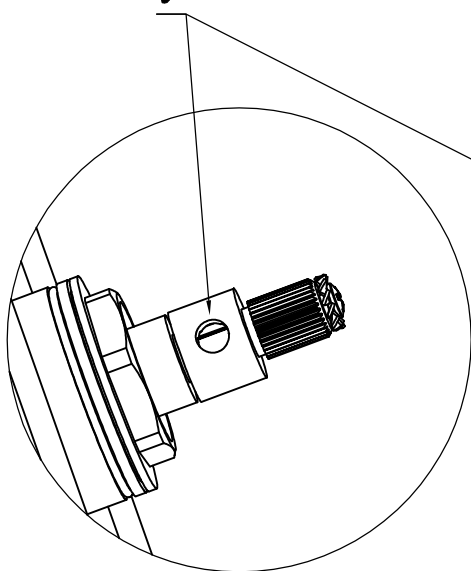


For Some Cases , Need To Adjust The Cartridge To Calibrate At 38°

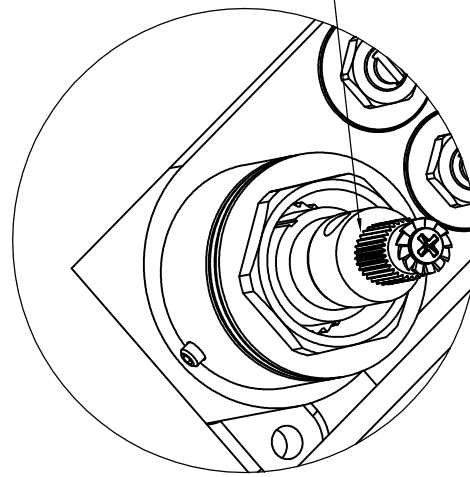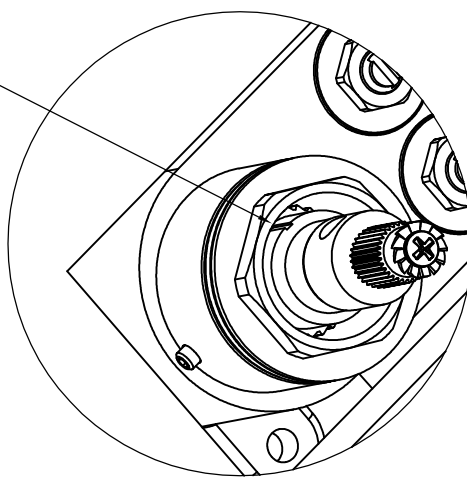

5. Front Plate & Handle Installation

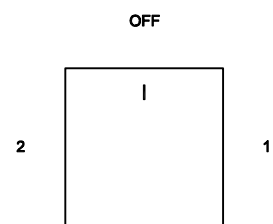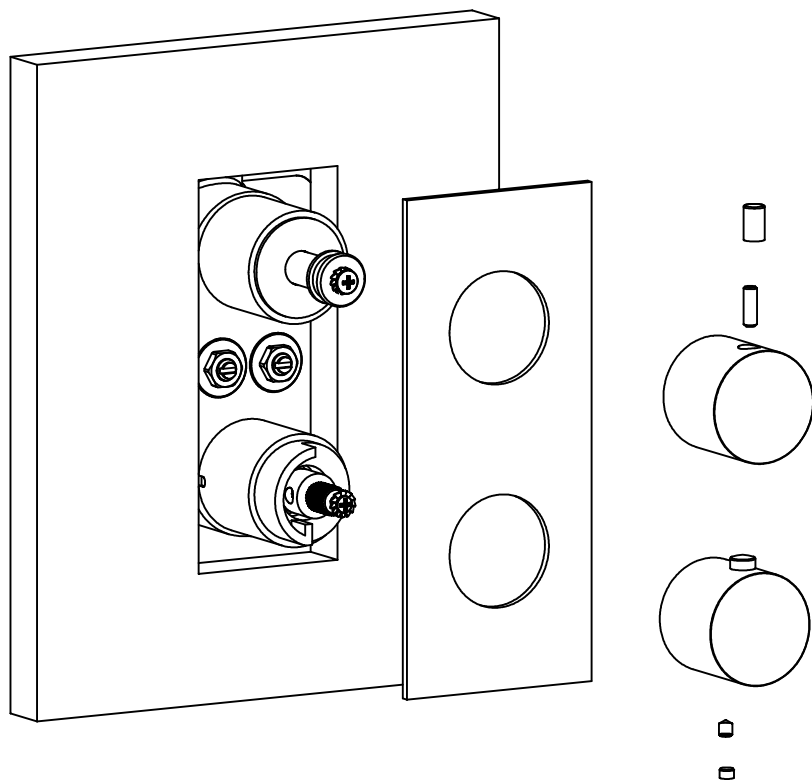

1+2
2-way

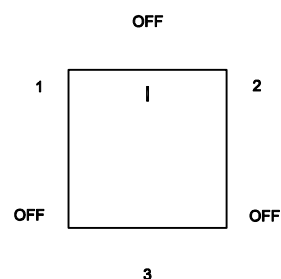

3-way

**Adjust Diverter Handle
To The Right Position**

6. Finish Installation

