



Instruction Manual


Free-standing Tub Filler

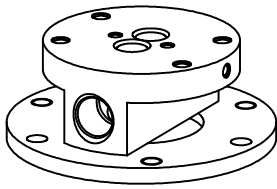


Rough-In
TF3200.RI

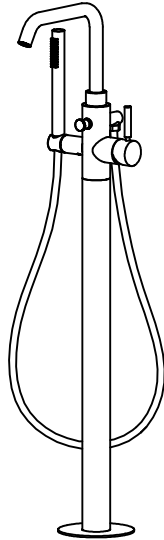




Trim Set
YG3216.TR

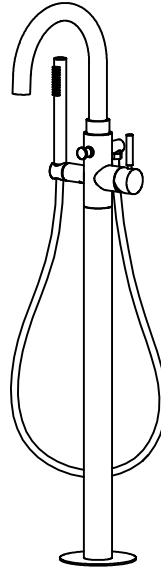


Trim Set
YG3212A.TR

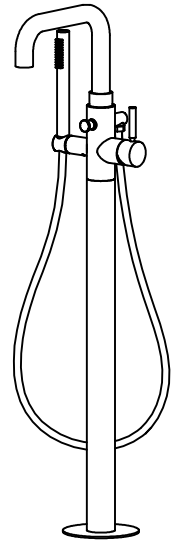

Trim Set
YG3212B.TR

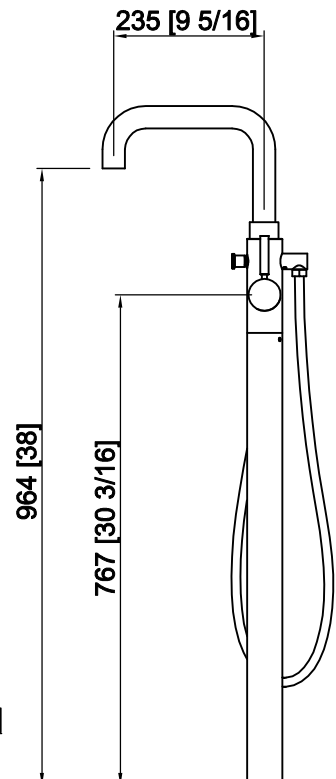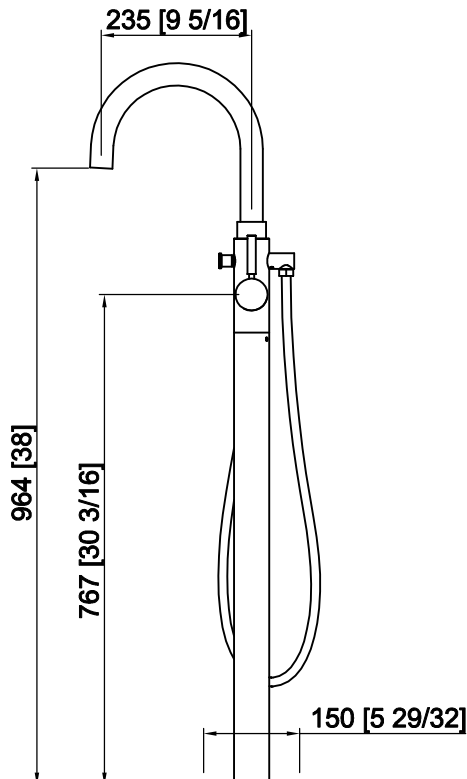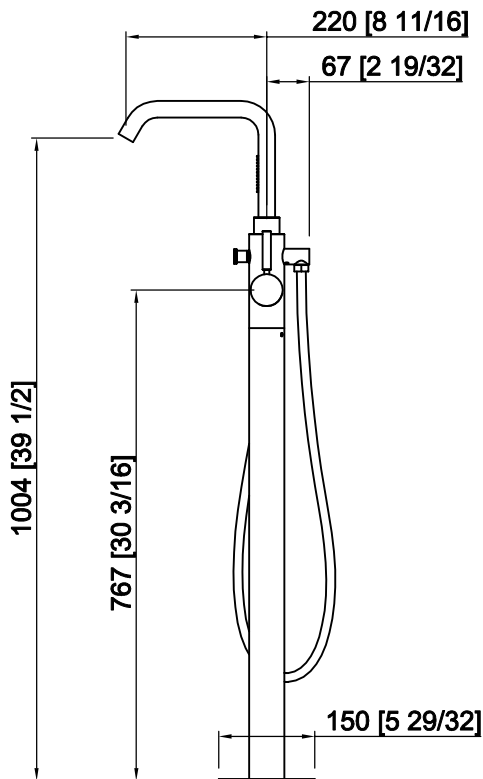


1. Rough-In Connection

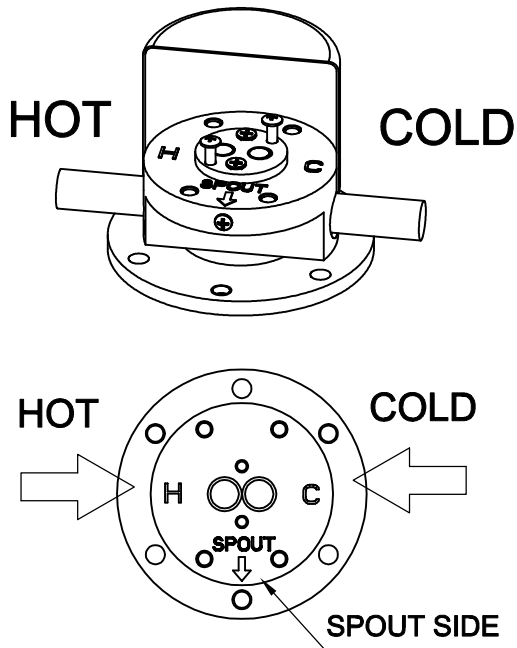


2. Finished Floor


Finished Floor Must Be Between Min. & Max.

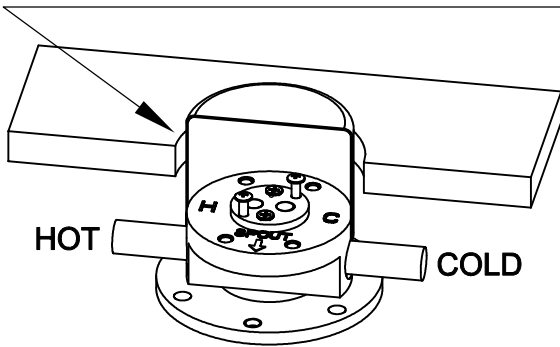

3. Remove Stopper

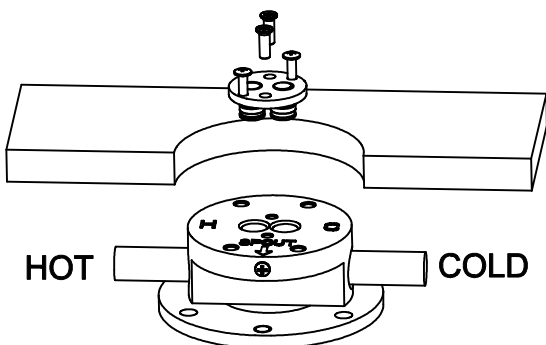

4. Install Mounting Plate

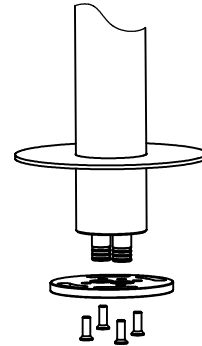

5. Install Trim Set

